

'T'


SLAT 'T' GONDOLA **fixing instructions**

NB : HEAVY PARTS, 2 PERSONS ADVISED

Handle with care - Some parts are sharp - Wear suitable gloves.

The slatted panels have the 1st groove 50mm down from top.

1. ASSEMBLE UPSIDE DOWN !!
 2. FIX END PANELS (B & A)
 3. FIX BASE (ITEM C)
 4. FIX PLINTH SIDES (ITEM D)
 5. TURN OVER & MOVE INTO POSITION.
 6. FIX SIDE PANELS (ITEM E)
 7. CLIP IN PLASTIC INSERTS INTO GROOVES IN PANELS. NB - ensure they are all right way up.
- NB. Base 'C' & Plinth 'D' may be pre - assembled.

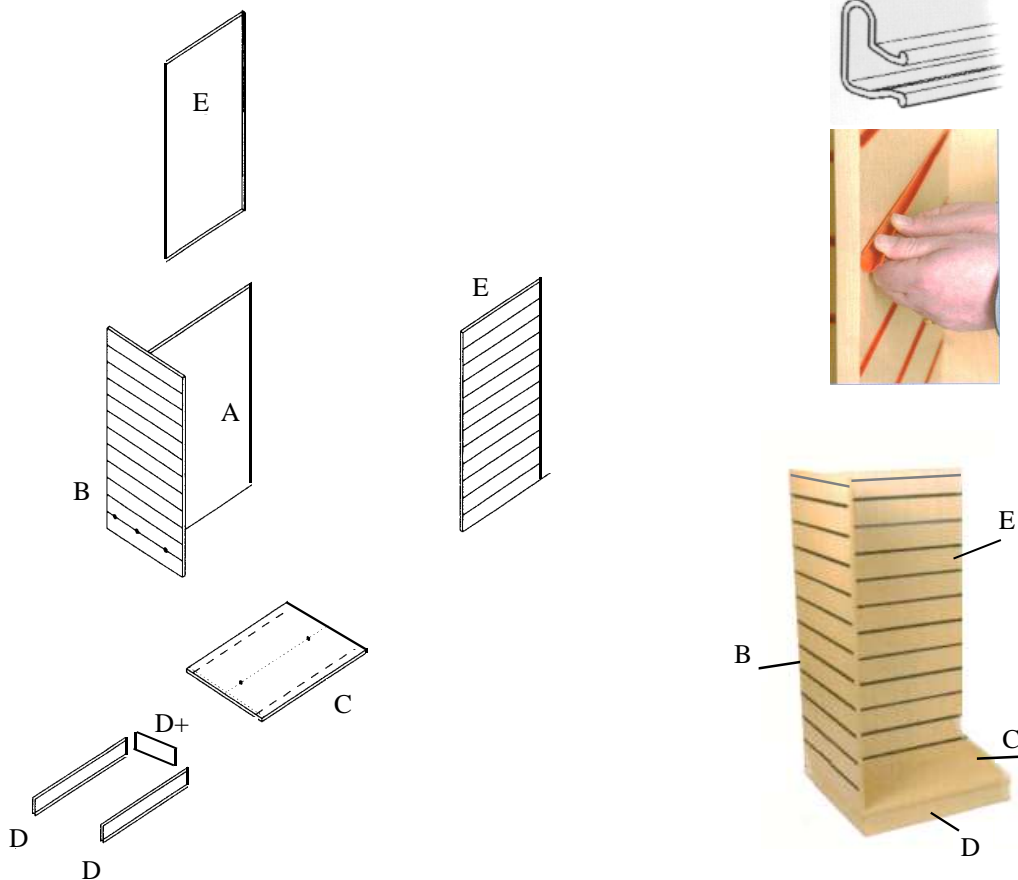

PARTS LIST-

A = MID PANEL PLAIN 1140 x 1204* mm (x 1)

B = END PANEL (GROOVED) 1250 x 600 (x 1)

C = BASE PANEL PLAIN 1204* x 600 (x 1)

D = PLINTH SIDE PANEL PLAIN 1204* x 90 (x 2)

D+ = PLINTH END PLAIN 550 x 90 (x1)

E = SIDE PANEL (GROOVED) 1140 x 1204* (x 2)

*size may vary depending on size ordered